

# Tank Alert® AB Indoor Alarm

## Auxiliary Contacts Wiring Instructions



# WARNING!



### ELECTRICAL SHOCK HAZARD


Disconnect all power sources before servicing. Failure to do so could result in serious injury or death. Must be installed by a licensed electrician and in accordance with the National Electric Code NFPA-70, state and local electrical codes.

### Auxiliary Contacts Specifications


**Voltage:** 120 VAC  
**Current:** 5 amps max. N/O  
3 amps max. N/C

**NOTE:** This unit includes auxiliary contact option. Due to increased power consumption, if an alarm condition occurs while on battery backup power, this option will reduce the life of the battery.


### 2. Remove screw, circuit board, and power cord.

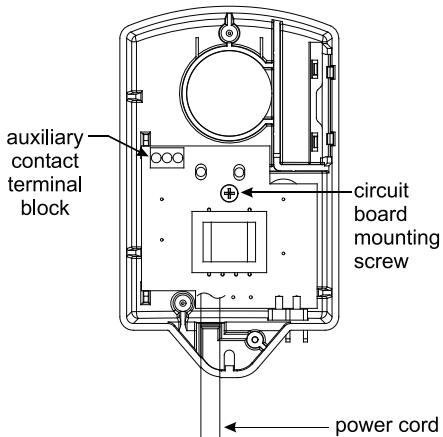


### 1. Remove enclosure screws and back cover.

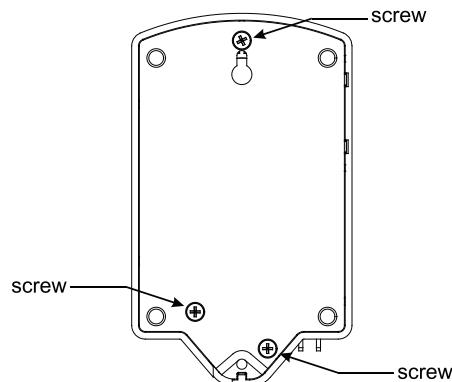


### 3. Drill hole and install strain relief (not included).

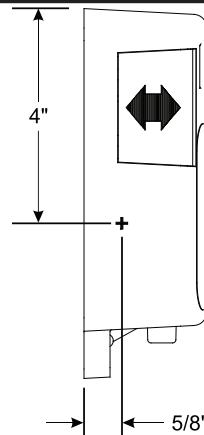

### 4. Replace circuit board, power cord, and screw. Connect wires to terminal block for auxiliary contacts.

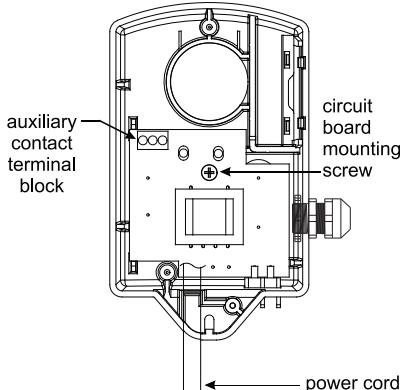

### 5. Replace back cover and screws.

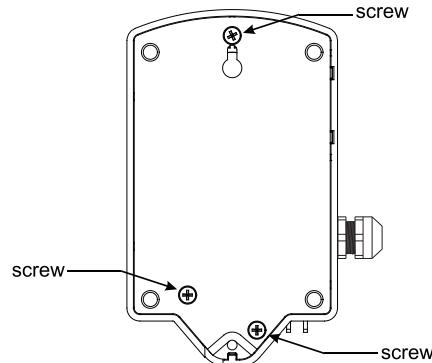

**SJE RHOMBUS®**

+1-800-746-6287

E-mail: [techsupport@sjeinc.com](mailto:techsupport@sjeinc.com)

[www.sjerhombus.com](http://www.sjerhombus.com)

Technical Support Hours: Monday - Friday, 7 A.M. to 6 P.M. Central Time

PN 1011689D 10/19 ©2019 SJE, Inc. All Rights Reserved. SJE RHOMBUS is a trademark of SJE, Inc.