



PS Patrol® System with 120V Alarm Installation Instructions




This control panel must be installed and serviced by a licensed electrician in accordance with the National Electric Code NFPA-70, state and local electrical codes.




Installation Instructions

Figure 1

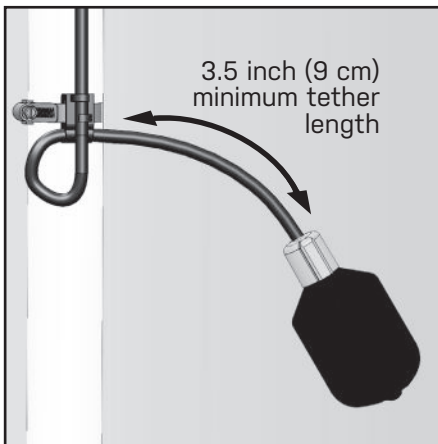


Install alarm float and pump float.
(Mounting Clamp detail)

Figure 2

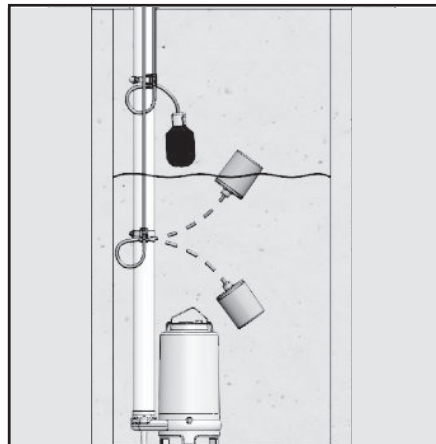

Wide angle* float system.
*SJE PumpMaster®, SJE PumpMaster® Plus,
or Super Single® pump switches

Figure 3

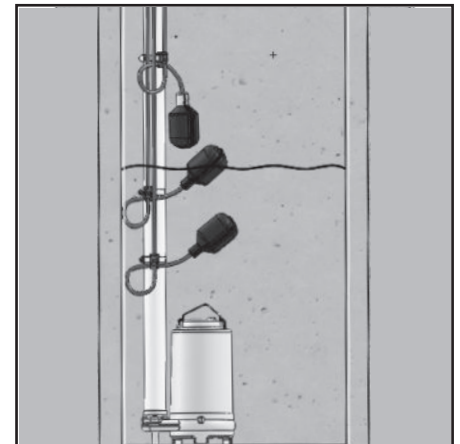

SJE Double Float® Master and Double
Float® pump switches

DETERMINING PUMPING RANGE (IN INCHES)

Super Single® pumping range	tether length	3.5	5	7	9	11	13	15
	pumping range	6.5	7.5	8.5	10	11	12.5	13.5
SJE PumpMaster® & SJE PumpMaster Plus® pumping range	tether length	3.5	6	10	9	14	18	22
	pumping range	7	10	16	22	28	33	36

Use only as a guide. Pumping ranges are based on testing in non-turbulent conditions.
Range may vary due to water temperature and cord shape.

Note: As the tether length increases, so does the variance of the pumping range.



Technical Support: +1 800-746-6287
techsupport@sjerhombus.com


www.sjerhombus.com

Technical Support Hours: Monday - Friday, 7 A.M. to 6 P.M. Central Time

PN 1039317B 02/21
© 2021 SJE, Inc. All Rights Reserved.
SJE RHOMBUS is a trademark of SJE, Inc.


Installation Instructions

Figure 4

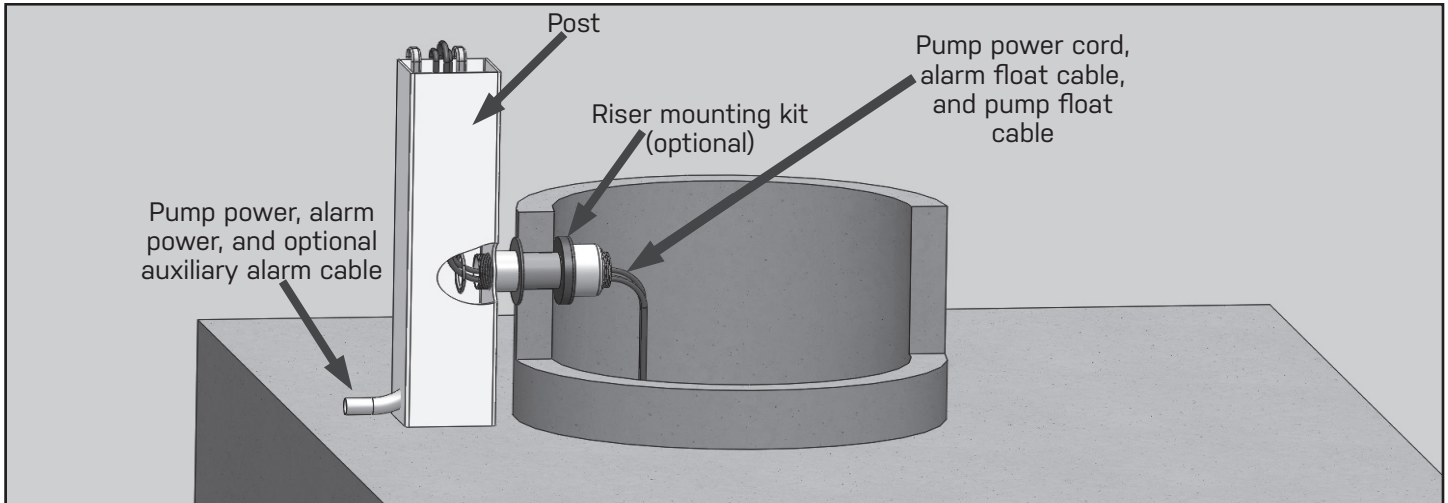

Run cables through optional riser mounting kit and post.


Figure 5

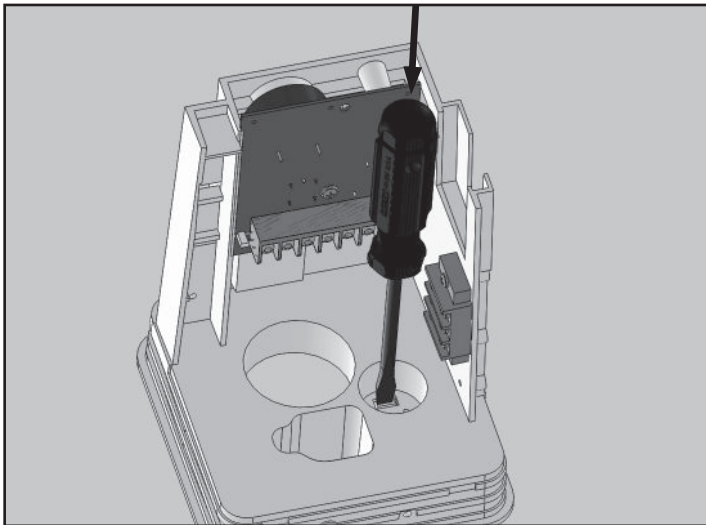

Punch out power cable knock outs as shown.

Note: Only remove knock outs for number of cables used.

Figure 6

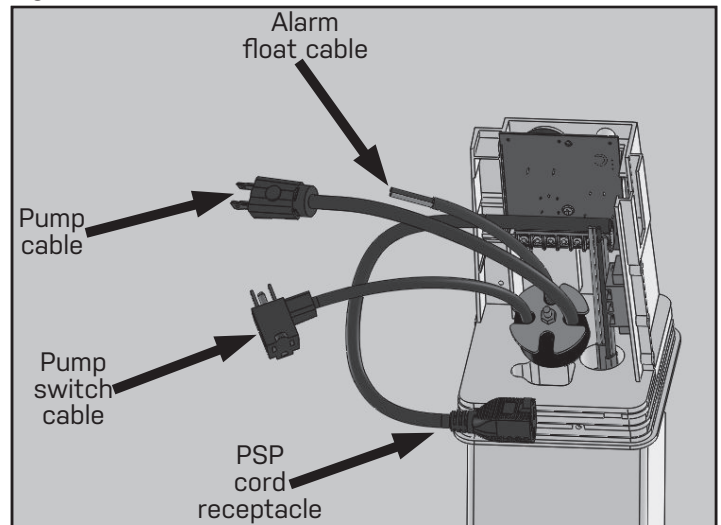

Holding base, run cables through cord seal holes.

Figure 7


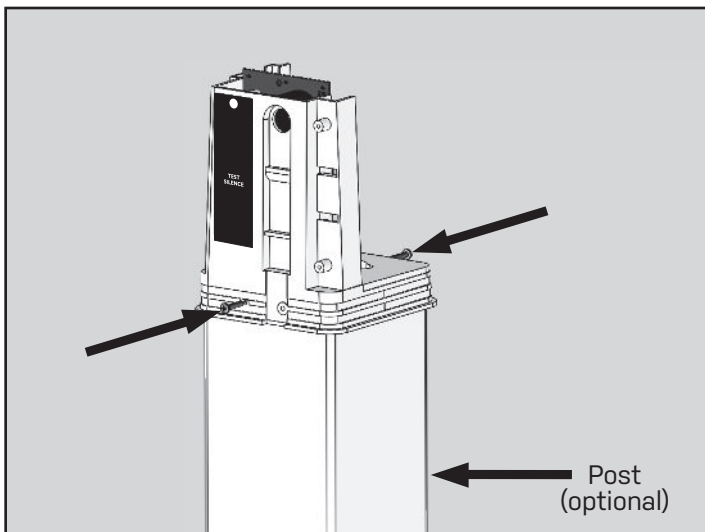



Figure 8

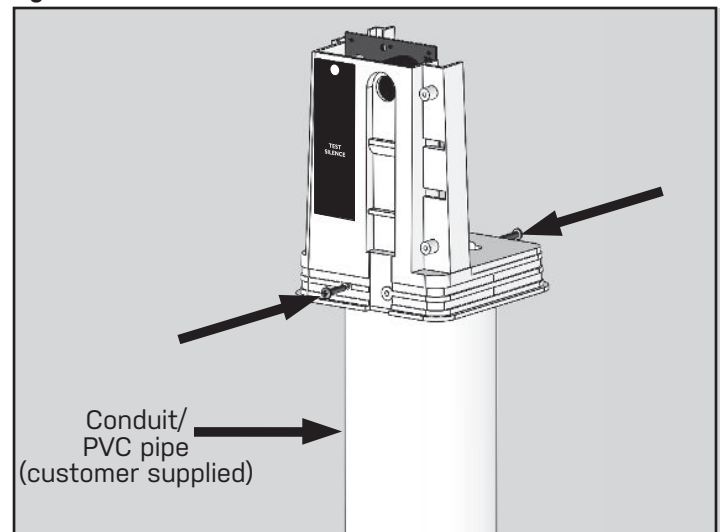

Mount PS Patrol® to post. **Note:** PS Patrol® can be mounted to optional square plastic post as shown in **Figure 7** or 4 inch conduit / PVC Pipe (customer supplied) as shown in **Figure 8**. Use #8 x 1" screws only.


Installation Instructions

Figure 9

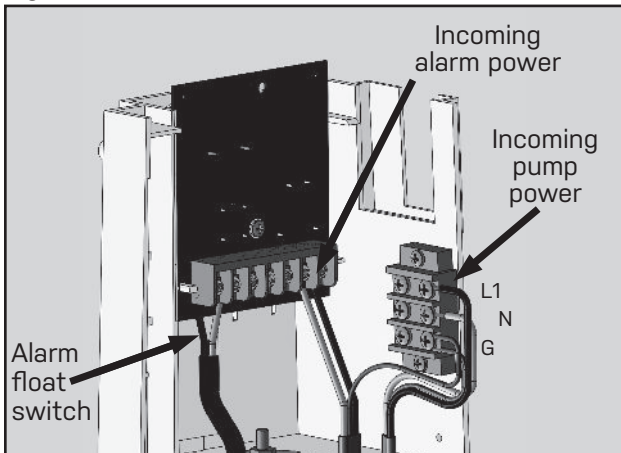

Connect alarm power, pump power and alarm float switch as shown.


Figure 11

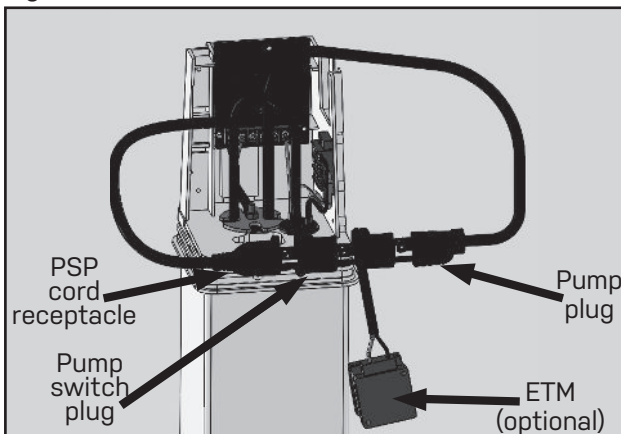

Plug pump switch piggy-back plug into PSP cord receptacle. If using optional ETM, plug this into back of pump switch piggy-back plug. Plug pump in last.


WARNING: Failure to have the plugs in order described as shown will effect proper operation of system.

Figure 13

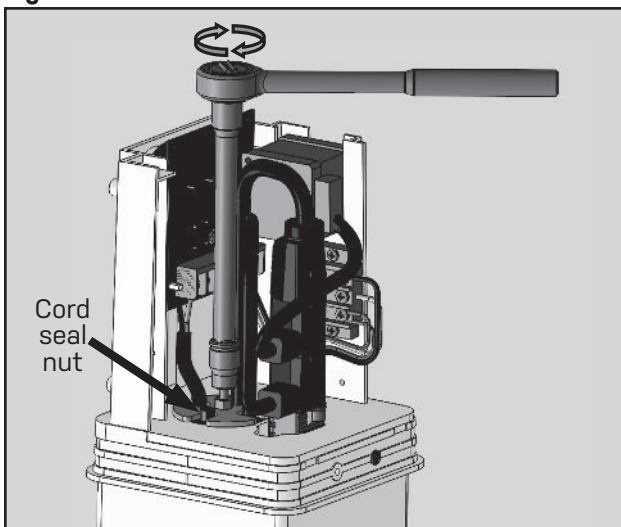

Firmly tighten cord seal nut so that cables do not move and cord seal is held in place.


Figure 10

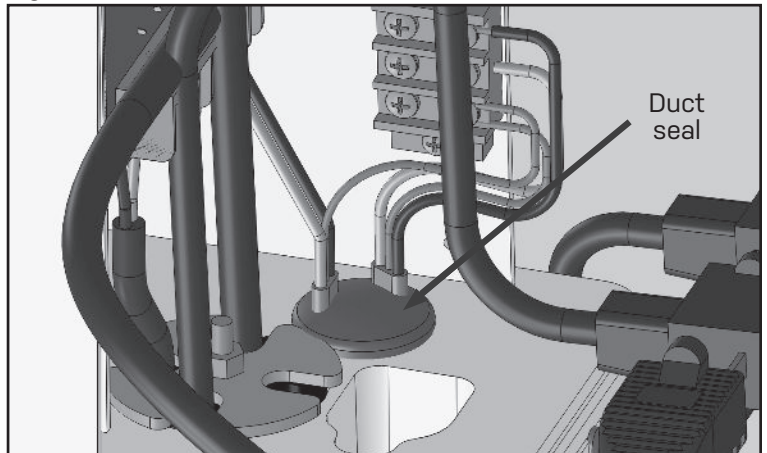

Use electrical duct seal to fill around incoming power cords. Ensure pocket is filled completely and the gaps filled around each cable.


WARNING: Failure to do so will allow sewer gases to enter control panel causing corrosion and failure of electrical components.

Figure 12

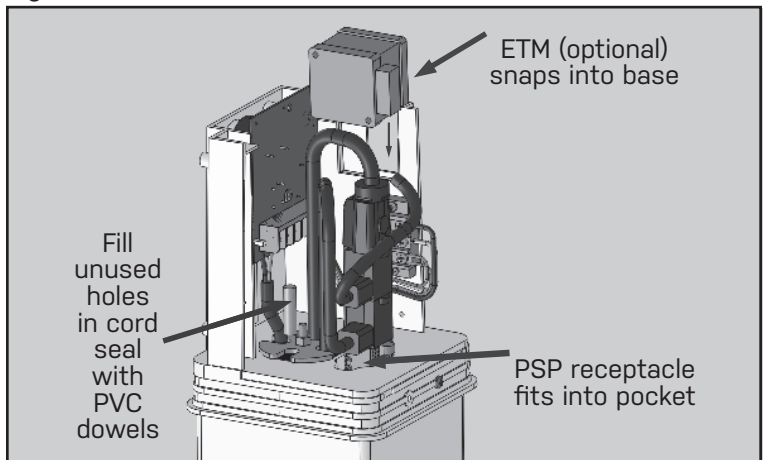

If ETM is used, snap into location as shown. Arrange cords as shown. Receptacle is inserted into pocket. Push excess cord back through cord seal. Install PVC dowels into unused holes of cord seal.

Figure 14

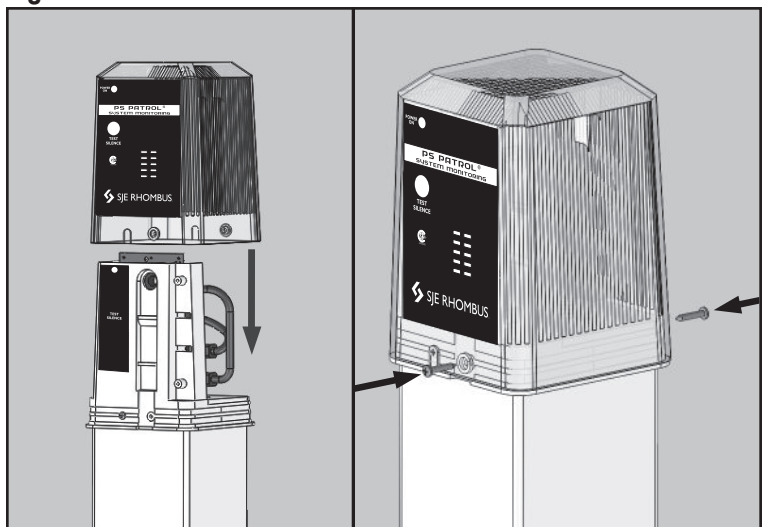

Install cover on base and screw into place.

Installation Instructions


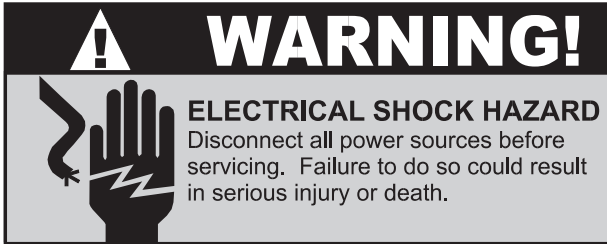


Figure 15



Turn on power and test alarm by pressing the test silence switch. Horn will sound and alarm light will illuminate.

Figure 16

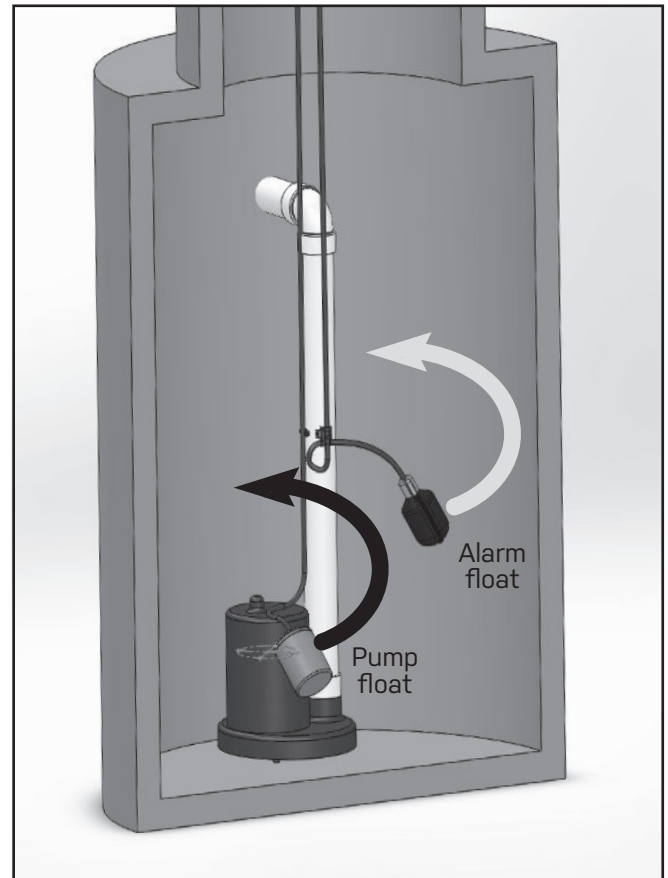

Perform final testing on system by lifting pump and alarm float. When pump float is lifted, the pump will turn on. When alarm float is lifted, the alarm horn will sound and alarm light will illuminate.

SJE Rhombus® Five-Year Limited Warranty

Five-Year Limited Warranty. For complete terms and conditions, please visit www.sjrhombus.com.

NOTICE!

Products returned must be cleaned, sanitized, or decontaminated as necessary prior to shipment to ensure that employees will not be exposed to health hazards in handling said material. All applicable laws and regulations shall apply.