


MODEL 113 CONTROL PANEL

Single Phase, Simplex Capacitor Start/Run Pump Control

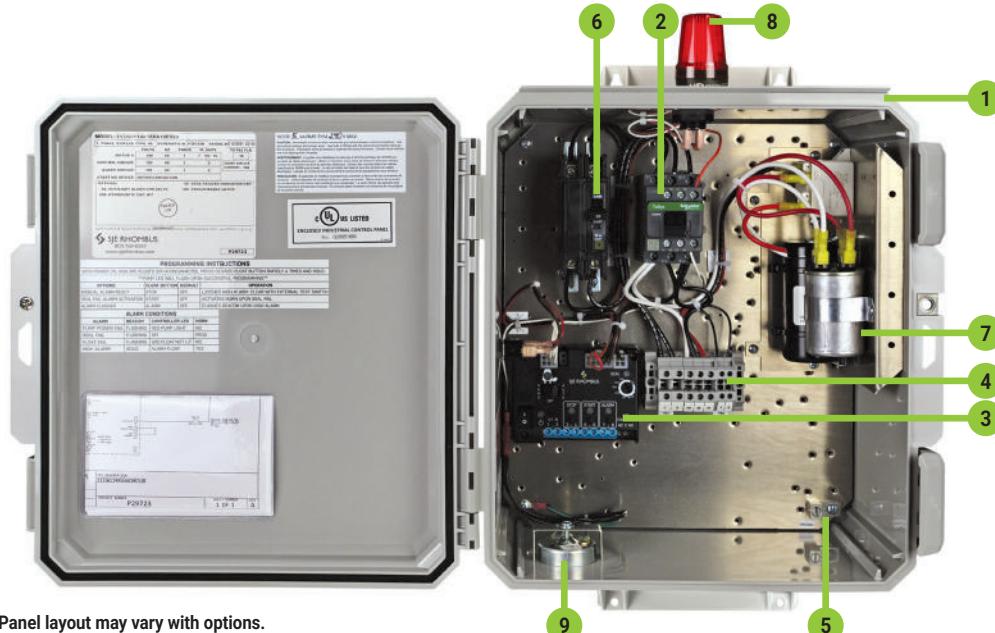

Panel layout may vary with options.



Model 113 control panels provide a reliable means of controlling one 120, 208, or 240 VAC single phase pump requiring external starting components in water and sewage installations. Two control switches activate an IEC motor contactor to turn the pump on and off. If an alarm condition occurs, an additional alarm switch activates the audio/visual alarm system. Common applications include pump chambers and lift stations.

The Model 113 control panel features built in pump failure and float out of sequence detection. In addition, there are three user selectable field programmable options: alarm steady state or flashing; alarm auto reset or manual reset; and optional seal failure alarm beacon plus horn activation.

Simplex controller features include:

- Touch safe circuit board housing and low voltage 24 VDC float circuits
- Alarm (field programmable to flash)
- Alarm automatic reset (field programmable to manual alarm reset)
- Float out-of-sequence detection
- Pump contactor failure detection
- Controller protected by three auto resettable fuses (control, alarm, and pump 1)

Note: SJE Rhombus recommends separate pump and control/alarm power sources.

Note: SJE Rhombus will warranty motor start kit components supplied by SJE Rhombus for one year. SJE Rhombus makes no warranties of any type with respect to motor start kits supplied by a customer.

COMPONENTS

1. Enclosure measures 14 x 12 x 6 inches (35.56 x 30.48 x 15.24 cm) NEMA 4X (ultraviolet stabilized thermoplastic, padlockable with integral mounting flanges, drip shield, (2) heavy duty cover latches, and stainless steel 1/4 turn set screw; for outdoor or indoor use)
2. IEC motor contactor controls pump by switching electrical lines
3. Simplex controller provides pump and alarm control; elevated in the enclosure for easy access and field wiring
 - a. HOA switch for manual control of the pump
 - b. Pump run green LED indicator
 - c. Control power ON/OFF switch
 - d. Power ON green LED indicator
 - e. Float push-to-test buttons
 - f. Float status red LED indicators
 - g. Auxiliary alarm contacts Form C
 - h. Option: adjustable seal failure circuit and red LED indicator (must select option 5E when ordering)
4. Pump input power and pump connection terminal block
5. Ground lugs
6. Circuit breaker (optional) provides pump disconnect and branch circuit protection
7. Capacitor start module - start/run capacitor kits available
8. Red LED beacon provides 360° visual check of alarm condition
9. Alarm horn provides audio warning of alarm condition (83 to 85 decibel rating)
10. Exterior alarm Test/Normal/Silence switch allows horn and light to be tested and horn to be silenced in an alarm condition; alarm automatically resets once alarm condition is cleared (Not shown)

Model 113 control panels cannot be returned. Please refer to the Product Return section.

Note: Other options available. Options selected may increase enclosure size and change component layout.

Note: Schematic/Wiring Diagram and Pump Specification Label are located inside the panel.

 **SJE RHOMBUS**®

113 CONTROL PANEL	1 ALARM PACKAGE	W ENCLOSURE RATING	1 STARTING DEVICE	PUMP FULL LOAD AMPS	4 PUMP DISCONNECTS	LEVEL CONTROL APPLICATION	6A10E OPTIONS (LISTED BELOW)
----------------------	--------------------	-----------------------	----------------------	---------------------	-----------------------	---------------------------	---------------------------------

CONTROL PANEL	✓	113	Single Phase Simplex Capacitor Start/Run
ALARM PACKAGE	✓	1	Alarm Package (includes test/normal/silence switch, fuse, red light, & horn)
ENCLOSURE RATING	✓	W	Weatherproof, NEMA 4X (engineered thermoplastic)
STARTING DEVICE	✓	1	IEC Motor Contactor 120/208/240V
PUMP FULL LOAD AMPS	0	0 - 7 FLA	
	1	7 - 15 FLA	
	2	15 - 20 FLA	
	3	20 - 30 FLA	
	4	30 - 40 FLA	
PUMP DISCONNECTS	✓	4	Circuit Breaker
LEVEL CONTROL APPLICATION	H	Pump Down (select Option 17 below)	
	L	Pump Up (select Option 17 below)	
	E	EZconnex® Float Switch System	
	X	No Floats	

Start/run capacitor kits must be ordered separately (see Option 12 below or call factory).

PRICING WORKSHEET	Model 113 Base Price	_____
	Alarm Package	_____
	Enclosure Rating	_____
	Starting Device	_____
	Pump Full Load Amps	_____
	Pump Disconnects	_____
Level Control Application		_____
Total Options		_____
TOTAL LIST PRICE		_____

OPTIONS	DESCRIPTION	
5A	Thermal Cutout/Heat Sensor Auto Reset (for pumps with thermal switch leads)	
5E	Seal Failure Circuit & Red Indicator (2 wire)	
✓ 6A	Auxiliary Alarm Contact, Form C (included as standard)	
8A	Elapsed Time Meter	
8C	Event (Cycle) Counter	
9_A	Pump Overload - Specify Amperage After Number 9 Followed by Letter "A" Example: 912A = 12 Amp Pump	0-30 FLA
		30-40 FLA
✓ 10E	Lockable Latch - NEMA 4X (included as standard, must select Enclosure Rating W above)	
10F	Lightning Arrestor (select pump circuit breaker)	
10K	Anti-condensation Heater	
12B	Customer Supplied Motor Start Components, Mounted in Enclosure by SJE Rhombus	
12C	Motor Start Component, Mounted and Supplied by SJE Rhombus	

For additional control panel options, please contact Technical Support at techsupport@sjeinc.com.

OPTIONS	DESCRIPTION
14B	Main Disconnect (rotary style, mounted through door, non-fused, padlockable in the OFF position, door interlock in the ON-position) (must select circuit breaker)
16C	30' Cord in Lieu of 20' Cord (per float)
16D	40' Cord in Lieu of 20' Cord (per float)
17G	SJE MilliAmpMaster™ / Pipe Clamp (3 Floats) - Mechanical
17H	SJE MilliAmpMaster™ / Externally Weighted (3 Floats) - Mechanical
19T	TOA (Test/Off/Automatic) Switch and Pump Run Light Through Door Mounted
19U	HOA (Hand/Off/Automatic) Switch and Pump Run Light Through Door Mounted
19X	Door Mounted Pump Run Indicator
33D	EZconnex® 3-Port, 25', with 10' Floats (3) / Pipe Clamp
35D	EZconnex® 4-Port, 25', with 10' Floats (4) / Pipe Clamp